


## ⚠ ご注意

- 正しくお使いいただくために、ご使用前に別紙「安全上のご注意」と「使用上のご注意」をよくお読みください。取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。
- 組立作業は、必ず 2 人以上で行ってください。
- 必ず平らな場所で、組み立てや調整を行ってください。
- 組み立ての際は、指などをはさまないよう、十分にご注意ください。
- ピアノ本体を載せたまま、スタンドを移動しないでください。転倒や落下の恐れがあります。
- 組み立て用以外のボルトがゆるんだときは、市販の六角レンチ（5mm）で締め直してください。

## 部品の確認

組み立てる前に、部品が揃っていることを確認してください。

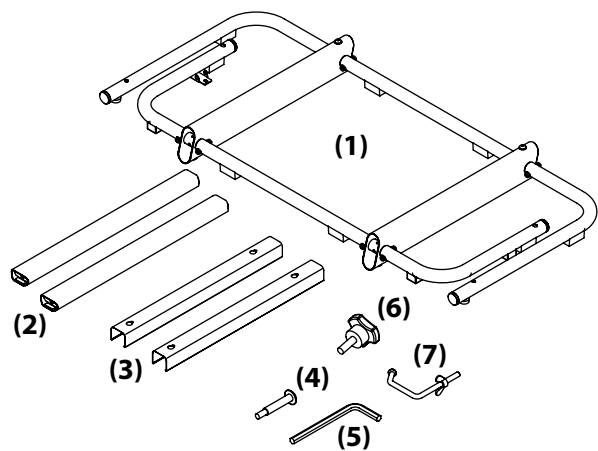


(1)	スタンド本体	1
(2)	サポート・バー（ボルト付き）	2
(3)	ケーブル・カバー	2
(4)	取り付けネジ	4
(5)	六角レンチ	1
(6)	ノブ・ボルト	4
(7)	ヘッドホン・フック	1


- ※ ノブ・ボルト、ヘッドホン・フックの取り扱いについては、ピアノ本体の取扱説明書をご覧ください。
- ※ 別途 (+) ドライバーをご用意ください。
- ※ 製品の仕様および外観は、改良のため予告なく変更することがあります。

## 組み立てかた


- 1 付属の六角レンチで、(A) のボルトとワッシャーを取りはずします。

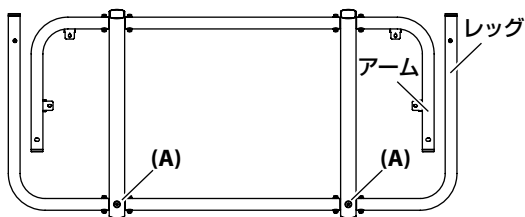


- 2 支柱を図のように起こし、支柱を支えながらはずしたボルト (A) とワッシャーで支柱とレッグを固定します。

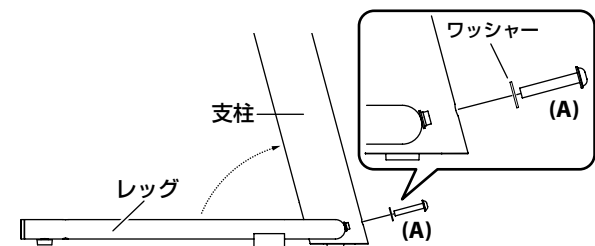


- 3 スタンドを寝かせます。

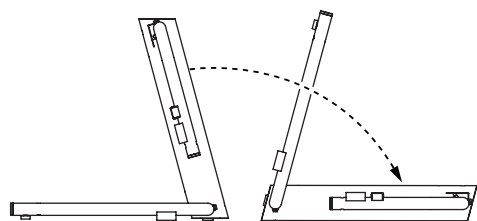


- 4 付属の六角レンチで (B) のボルトとワッシャー (2 カ所) を取りはずし、アームを図の方向に置きます。

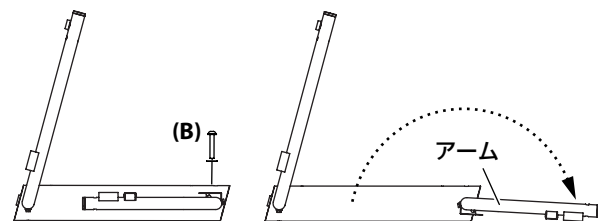


- 5 サポート・バーに取り付けてあるボルト (C) とワッシャーを、付属の六角レンチではずします。

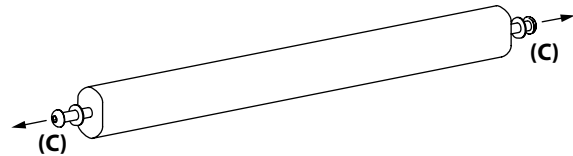


- 6 手順 5 ではずしたボルト (C) とワッシャーで、サポート・バーをレッグに仮固定します。

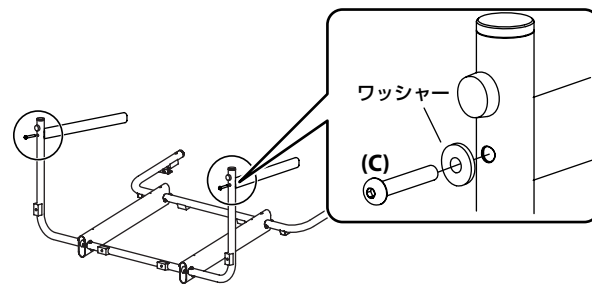


- 7 アームを起こし、手順 5 ではずしたボルト (C) とワッシャーで、サポート・バーとアームを固定します。

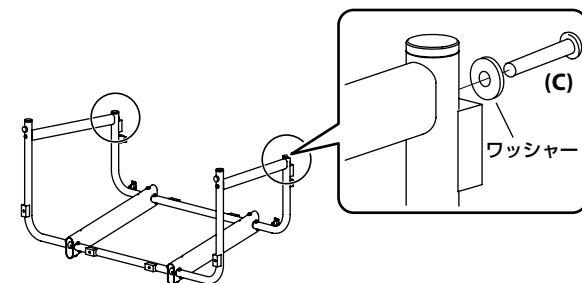

- 8 手順 6 で仮固定したボルト (C) を締めつけます。

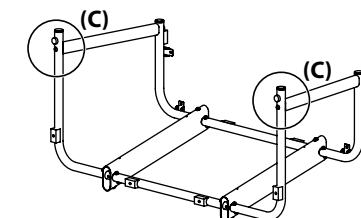


- 9 手順 4 で取りはずしたボルト (B) とワッシャーで、アームを固定します。

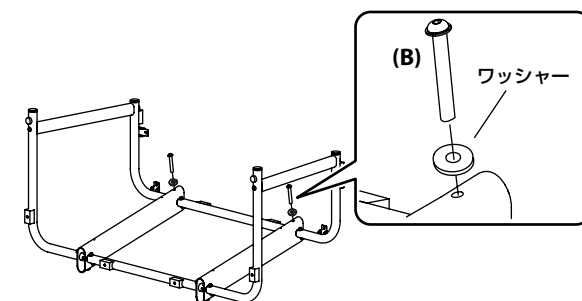

- 10 スタンドを起こします。

- 11 スタンドが床面に対して水平になるように、図の位置にあるアジャスターを回して調節します。


スタンドが傾いたりぐらついたりすることがないように調節してください。

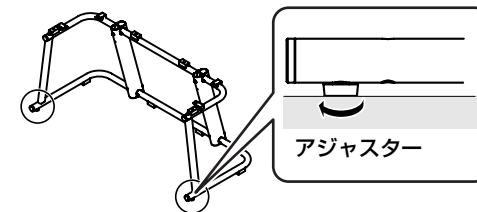

## ケーブル・カバーの取り付け


ケーブル・カバーを取り付け、本体に接続したコード類まとめておくことで、見た目をスッキリとさせることができます。

- 1 (+) ドライバーで、支柱 (各 2 カ所) に付属の取り付けネジをつけます。

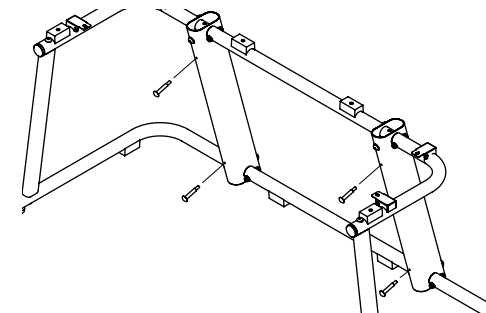


- 2 ケーブル・カバーの取り付け穴 (2 カ所) を、支柱の取り付けネジ (2 カ所) に引っ掛けます。

※ ケーブル・カバーが取り付けにくい場合は、一度ネジをゆるめて取り付けした後、再度ネジを締めてください。

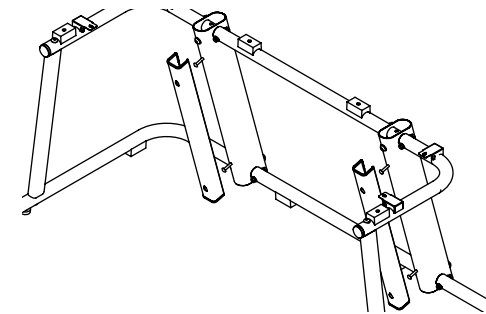

## 六角レンチの保管

付属の六角レンチは、図の位置にあるホルダーに差し込んでおくことができます。必要ときに、すぐに取り出すことができます。

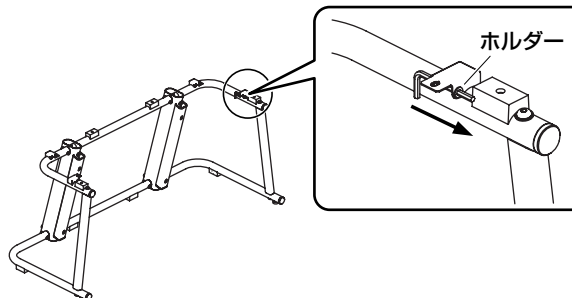


### Caution

- Before using this stand, carefully read the sections entitled: "USING THE STAND SAFELY" and "IMPORTANT NOTES" (separate sheet). These sections provide important information concerning the proper operation of the stand. The manual should be saved and kept on hand as a convenient reference.
- Make sure that another person is on hand to help with the assembly and setup.
- Assembly and adjustment must be performed on a flat and level surface.
- Be careful not to pinch your fingers when setting up the stand.
- Do not move the stand with the keyboard resting on it. Doing so may cause the keyboard to overturn or fall.
- If any of the bolts that are not involved in the assembly procedure have become loose, use a commercially available allen wrench (5 mm) to tighten them.

### Check the parts

Before you begin assembly, check to make sure that you have all of the parts.

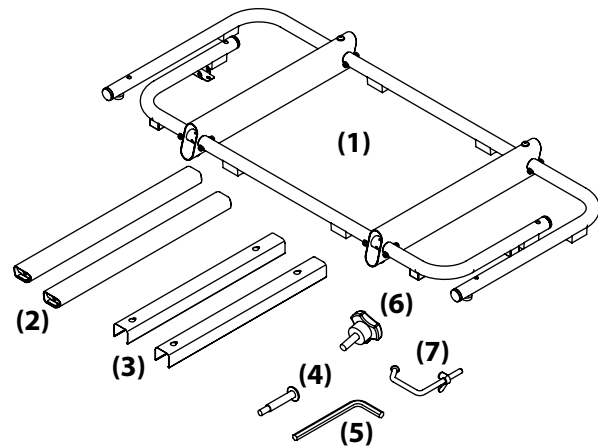


(1)	Stand	1
(2)	Support bar (with bolts)	2
(3)	Cable cover	2
(4)	Stud screw	4
(5)	Allen wrench	1
(6)	Knob bolt	4
(7)	Headphones hook	1


- \* For details on using the knob bolts and headphone hook, refer to the owner's manual that came with the piano.
- \* You'll need to provide a Phillips (+) screwdriver.
- \* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

### Assembly


- 1 Use the included Allen wrench to remove the bolts marked (A) and washers.

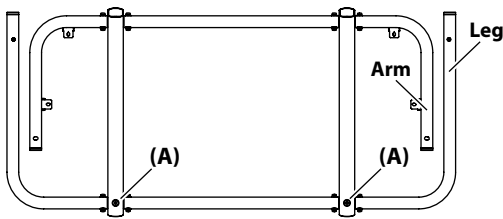


- 2 Raise the support columns as shown in the illustration, and while holding the columns in place, use the previously removed bolts (A) and washers to fasten the columns to the leg.

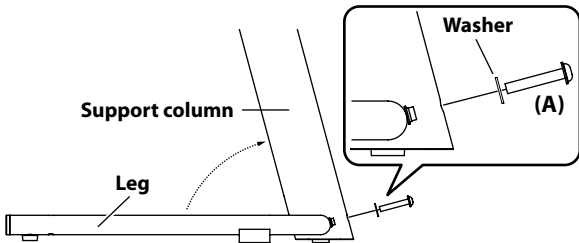


- 3 Lay the stand on its back.

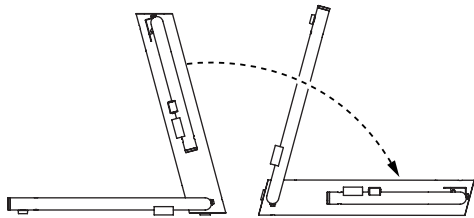


- 4 Use the included Allen wrench to remove the two bolts marked (B) and their washers, then swing the arm to the position shown in the illustration.

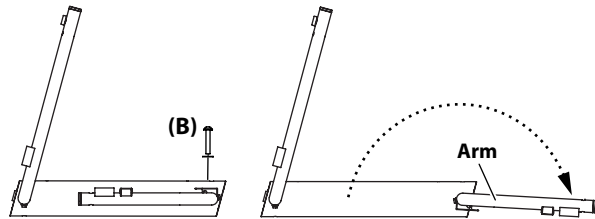


- 5 Use the included allen wrench to remove the bolts (C) and washers that are attached to the support bars.

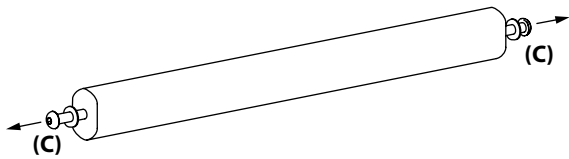


- 6 Using the bolts (C) and washers that you removed in step 5, loosely fasten the support bars to the leg.

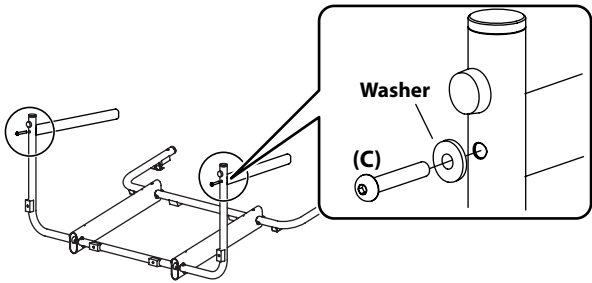


- 7 Raise the arm, and using the bolts (C) and washers you removed in step 5, fasten the support bars to the arm.

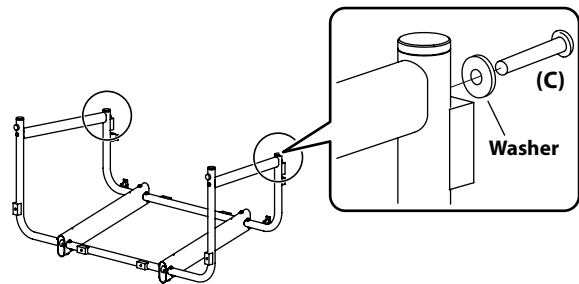

- 8 Firmly tighten the bolts (C) that you lightly fastened in step 6.

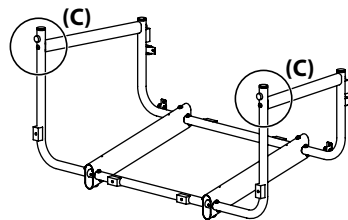


- 9 Fasten the arm using the two bolts (B) and washers you removed in step 4.

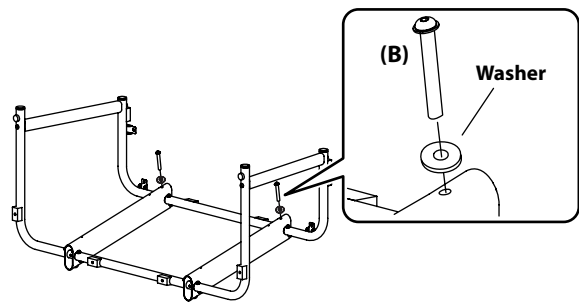

- 10 Place the stand upright.

- 11 Turn the adjusters located at the positions shown in the illustration so that the stand is horizontal relative to the floor.


Adjust them so that the stand does not lean or wobble.

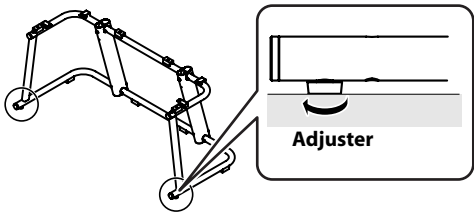

### Attaching the cable covers


Attaching the cable covers allows you to improve the appearance of your setup by neatly organizing the cables connected to the keyboard.

- 1 Use a Phillips (+) screwdriver to attach two stud screws to each support column.

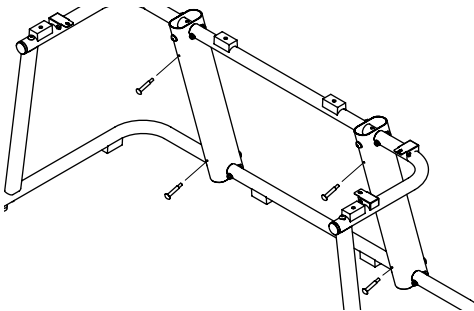

- 2 Hook the two holes in each cable cover onto the two stud screws you attached to each support column.

\* If you have difficulty attaching the cable covers, temporarily loosen the screws, and re-tighten them after you've attached the cable covers.

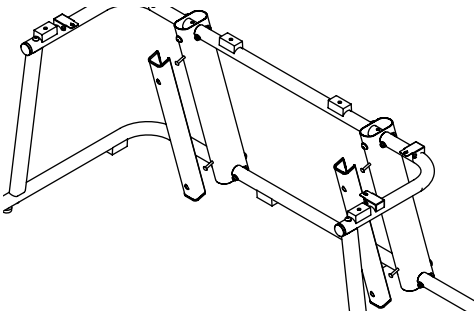

### Storing the allen wrench

The included allen wrench can be inserted into the holder shown in the illustration. Stored here, it can be removed whenever needed.

